Generated: 4 December, 2021, 04:30

How To - Fit new speakers Posted by gv1.3 - 2010/09/30 03:53

Hi lads just wrote this up on tgtt and thought I would post it here also as some of you may find it useful.

My MR2 had very crackly sound from the speakers and so I checked the speakers and found they were in a bad way. I decided to change them.

Before you read any further please note that I have done expensive audio installs before and taken a lot of time and care to get very good sound. In this instance I wanted a cheap install to allow me listen to the radio, I had limited time and did not want to spend much money as I rarely use the radio. Please do not criticise or slate this install it is merely a guide for a cheap and cheerful speaker swap :)

So I was not 100% sure the problem lay with the speakers until I stripped the door down and found this:

http://www.toyotagtturbo.com/dylan/images/mr2/speakers/speaker1.jpg

I looked around and found lots of confusing information about replacement speakers for the MK2 MR2. Many speakers are the same size in diameter but at the back are too wide. I got tired of looking for info on what would fit exactly and decided to remove the speakers and take them in to a shop and see what I could find closest in size.

I found these in halfords

Front Alpine SXE-1725S - 6.5"

Rear Alpine SXE-1025S - 4"

I also bought a few feet of speaker wire, you always need a bit of this.

Before I began I made sure I had the wiring diagram for the MR2. I found out that the MR2 had an "active" or "passive" system. Apparently the active system has an amp and sub behind the seat. Mine didnt have these so I have the passive system.

This is the wiring info for the speakers

Left Front Speaker Positive Wire (+): Pink

Left Front Speaker Negative Wire (-): Purple

Right Front Speaker Positive Wire (+): Light Green

Right Front Speaker Negative Wire (-): Blue

Left Rear Speaker Positive Wire (+): Black

Left Rear Speaker Negative Wire (-): Yellow

Right Rear Speaker Positive Wire (+): Red

Right Rear Speaker Negative Wire (-): White

To strip down the door you need to

-undo several screws across the bottom of the door that hold the door panel on and one in the middle of the door near the hinge (it has a cap on it)

Toyota MR2 Drivers - Toyota MR2 Drivers

Generated: 4 December, 2021, 04:30

- -undo the screw behind the lever for opening the door.
- -Remove the electric window panel switch
- -Remove the plastic pocket in the door armrest
- -Pull at the panel of the door until the clips holding it on give way

Screw out the old speaker and disconnect the speaker connection. I decided to keep this and attach it to the new speaker for simple installation.

Chopped this off the old speaker

http://www.toyotagtturbo.com/dylan/images/mr2/speakers/speaker2.jpg

Stripped door

http://www.toyotagtturbo.com/dylan/images/mr2/speakers/speaker3.jpg

Ready to connect to new speaker

http://www.toyotagtturbo.com/dylan/images/mr2/speakers/speaker4.jpg

New speaker screwed to door

This speaker is not a direct fit but if positioned correctly 2 of the original screws will hold it in place and one of the longer screws you removed from the bottom of the door panel will allow you get a hold in the third hole. Tighten down carefully. The speaker surround will flex a little - go easy!

http://www.toyotagtturbo.com/dylan/images/mr2/speakers/speaker5.jpg

The new speaker sits off the door a little and the door panel will not sit flush like it used to. Take a strong cutting knife/stanley blade and strip the back of the door panel speaker surround. Takes 1 minute (be careful of your fingers!)

http://www.toyotagtturbo.com/dylan/images/mr2/speakers/speaker6.jpg

Once paired back the panel will fit back perfectly.

The rear speakers can be accessed by:

- -pull up the sill plastic toward the rear of the seat
- -on the drivers side you will need to remove the screw in the lever for the engine cover release
- -pull the plastic panel covering the rear speaker until it comes free
- -two screws hold the plastics down near the speaker, remove these
- -using a number 10 socket you can remove the speaker mount, you might need a number 10 spanner for one of the top bolts as it is partially under the plastic (you will see what I mean) and you might not be able to get a socket under there.
- -remove the speaker mount and speaker and disconnect the connection just like you did on the front speaker

I chopped the connection like I did on the front and connected it to the new speaker

I pondered what to do about the fact that the new speaker did not fit the speaker mounting bracket. As I was pushed for time I decided to use cable ties;)

http://www.toyotagtturbo.com/dylan/images/mr2/speakers/speaker7.jpg

I trimmed the excess cable tie and they are rock solid with no movement at all. Once the panel is put

Toyota MR2 Drivers - Toyota MR2 Drivers

Generated: 4 December, 2021, 04:30